

## How to Install CUPS Driver

SEWOO Thermal Printer

## 1. Linux(SUSE, Fedora Core, RedHat)

### 1.1. Installation.

1. Extract this archive creating the `sewoocupsinstall_amd64` directory automatically.

```
# tar -zxvf sewoocupsinstall_amd64.tar.gz
```

2. Open your favorite shell (bash, etc.)

and move to the `sewoocupsinstall_amd64` directory.

```
# cd sewoocupsinstall_amd64
```

3. Execute the 'su' command to obtain super-user level permissions.

You must enter the root user's password for this to succeed. Be careful!.

4. Type 'make install' to install this package onto your computer.

```
# make install [Enter]
```

Or

```
> sudo sh setup.sh [Enter]
```

**A successfull install should result in output similar to this:**

```
# installing
cp ppd/*.gz install
cd install; exec ./setup
SEWOO TECH
SEWOO TECH CUPS Driver 1.0.0 installation Start
-----
```

Models included:

SEWOO LKT Series

Searching for ServerRoot, ServerBin, and DataDir tags in `/etc/cups/cupsd.conf`

ServerBin tag is present as an absolute path

DataDir tag is present as an absolute path

ServerRoot = `/etc/cups`

ServerBin = `/usr/lib/cups`

DataDir = `/usr/share/cups`

Copying rastertosewoo filter to //usr/lib/cups/filter

Copying Model PPD files to //usr/share/cups/model/SEWOO

Restarting CUPS

cups: stopped scheduler.

cups: started scheduler.

Install Complete

Add printer queue using K Menu -> Utilities -> Printing -> Printing Manager, or

Add printer queue using OS tool, <http://localhost:631>, or <http://127.0.0.1:631>

**5. Goto <http://127.0.0.1:631> or use your favorite CUPS admin tool.**

**Or K Menu -> Utilities -> Printing -> Printing Manager.**

## **1.2. How to Add Printer**

### **1.2.1. How to Add Printer(SUSE, Fedora Core)**

K Menu -> Utilities -> Printing -> Printing Manager.

Or <http://localhost:631>

Add → Add Printer/Class... → Next

→ Local Printer(Parallel, Serial, USB)

Or Network Printer(TCP)

→ Manufacturer(SEWOO) and Model(SEWOO LKT-Series)

→ End.

### **1.2.2. How to Add Printer(RedHat)**

Start Application -> Preferences -> Printing Manager Or <http://localhost:631>

Add → Add Printer/Class... → Next

→ Local Printer(Parallel, Serial, USB)

Or Network Printer(TCP)

→ Manufacturer(SEWOO) and Model(SEWOO LKT-Series)

→ End.